

## Sensor Faucet Installation and Use Manual

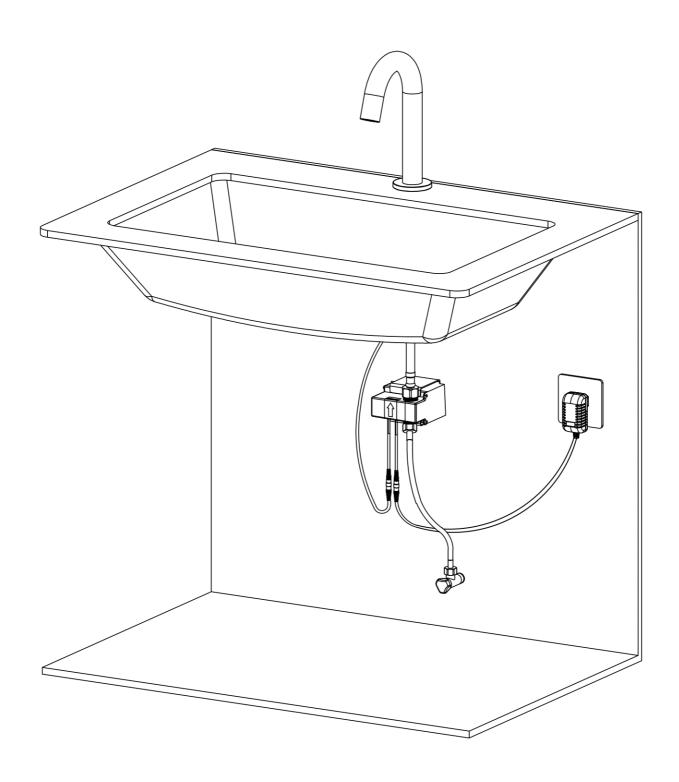


7536.0010



# sensor faucet installation

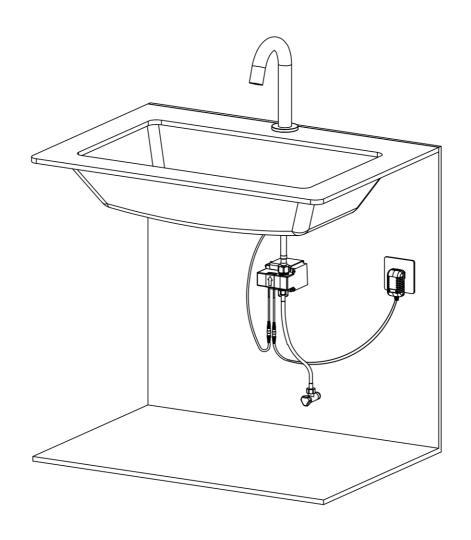


### ●List of Tools

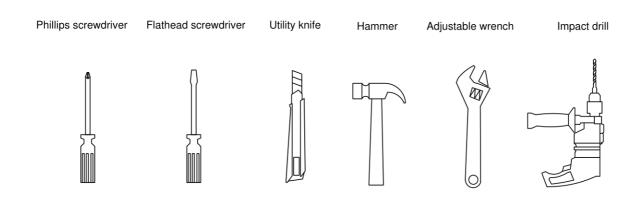


\_\_\_\_2

- Preparation of Product Accessories
- ①Single infrared sensor
- ②Adapter (AC power version)
- 3Solenoid valve assembly

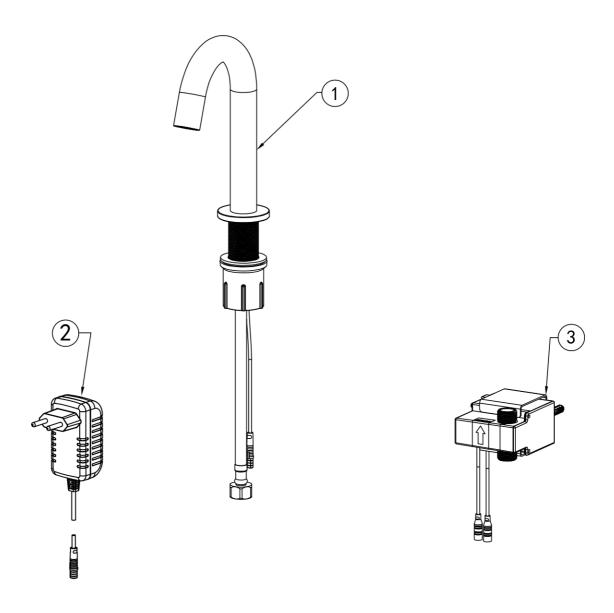


#### Installation Process

1. Fixing the faucet: Install the faucet onto the countertop and tighten the nut underneath.

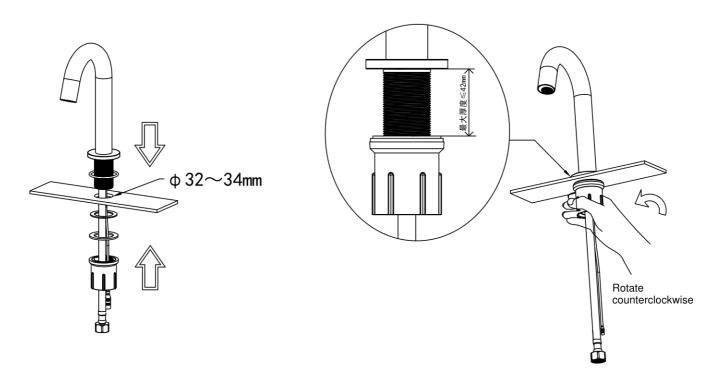


- 2. Fixing the solenoid valve assembly:
- -Secure the solenoid valve assembly to the wall at an appropriate position using self-tapping screws.

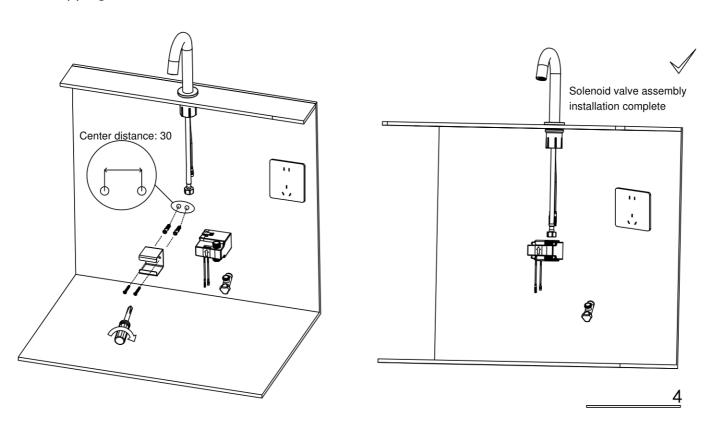


#### Installation Process

- 3. Connecting Water Pipe:
- -Connect the inlet hose of the faucet body to the upper interface labeled "  $\uparrow$  " on the solenoid valve assembly.
- -Connect the lower interface labeled " \u2224" on the solenoid valve assembly to the flexible water hose and angle valve.
- -Check for any water leaks in the plumbing system by turning on the water.
- -If there are any leaks, promptly address and resolve them.

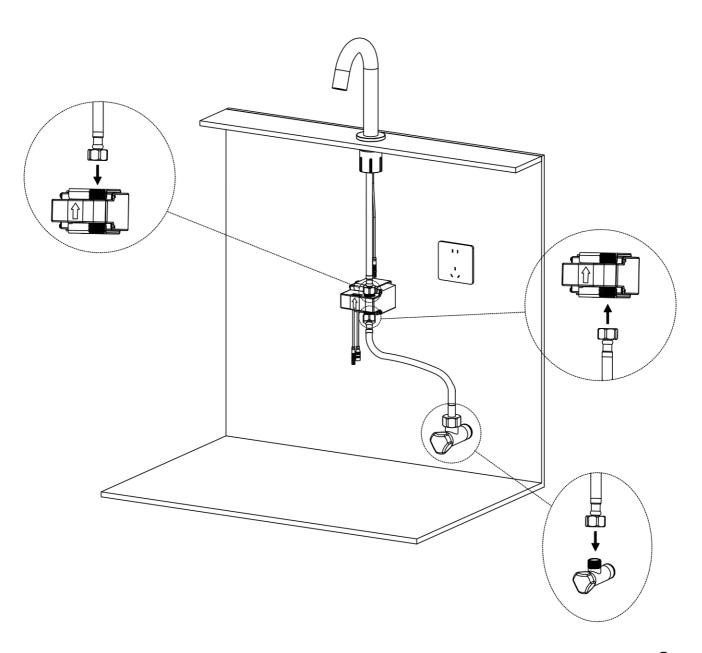


#### Installation Process

- 4.AC Power Version Wiring:
- -Connect the black 2-core wire from the faucet body to the black 2-core wire of the solenoid valve assembly.
- -Connect the red 2-core wire from the faucet body to the red 2-core wire of the power supply.

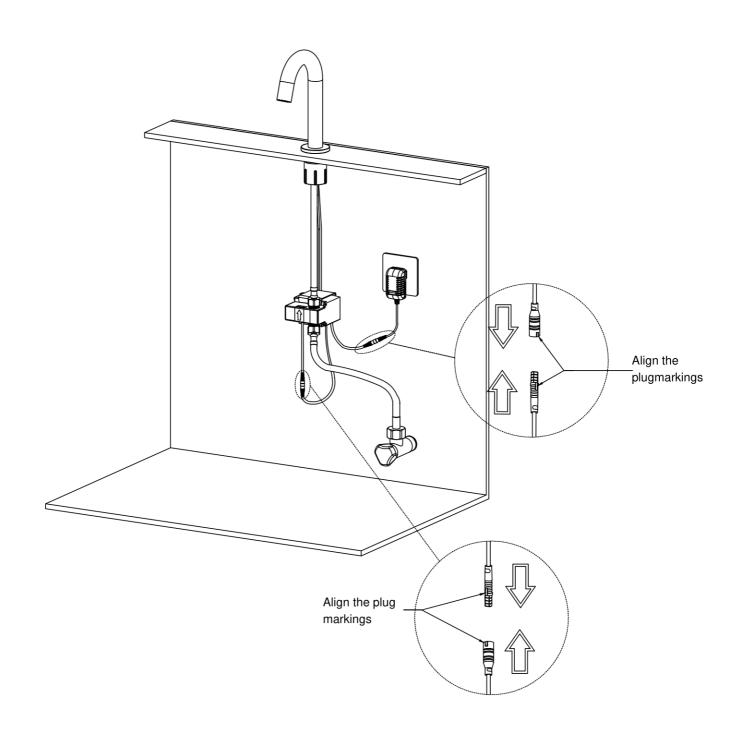

### sensor faucet user manual

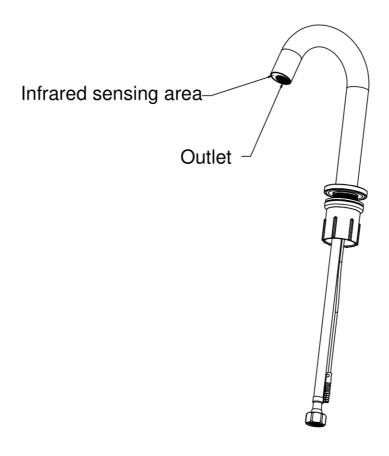

●Single Infrared Sensor Faucet instructions for Use

Move your hand within a proximity of the sensor head (≤8cm) to activate water
flow. After removing your hand for 1 second, the water flow will stop.

