

TECHNICAL DATA SHEET

Order No. 443-2130

Item/Model SARO Plate Warmer Cabinet

model TW 30

GTIN 4017337071807



- Material: stainless steel
- 2 shelves on rails, pull-out
- Manual temperature control
- Allows warming of 30 plates simultaneously
- For plates with a maximum diameter of 28 cm
- 4 wheels, with locking brake
- Fan ensures even heat distribution
- Temperature range: +30 / +85 °C
- Connection: 230 V 50 Hz 0.5 kW
- Dimensions: W 350 x D 545 x H 638 mm
- Shelves: W 290 x D 435 mm, distance to the next shelf each H 120 mm, distance from bottom to 1st shelf also 120 mm, distance from last shelf to lid 125 mm
- Depth (external) with door handle: 550 mm
- Weight (net/gross): 15.3 / 16.8 kg

Origin China customs tariff no. 85167970

Stand: 06.03.2025

Importer Saro Gastro-Products GmbH, Sandbahn 6, 46446 Emmerich am Rhein, GERMANY



SAFETY & WARNING INSTRUCTIONS

Order No. 443-2130

Item/Model SARO Plate Warmer Cabinet

model TW 30

GTIN 4017337071807



Safety and Warning Instructions

- Place the device exclusively on a stable, level, and heat-resistant surface.
- Ensure that the mains voltage matches the specifications on the rating plate.
- Children and unauthorized persons must not operate the device or be left unattended near it.
- During operation, the device's surfaces, particularly the heating elements and interior surfaces, can become very hot risk of burns. Use appropriate protective gloves.
- Never clean the device with a water jet or immerse it in liquids to avoid short circuits and electric shocks.
- Before cleaning, maintenance, or extended periods of non-use, switch off the device, disconnect it from the power supply, and allow it to cool completely.
- Operate the device in a dry, well-ventilated location. Maintain a minimum distance of 10 cm on the sides and 30 cm above the device to ensure proper air circulation.
- Do not store flammable or explosive materials near the device.
- If visible damage or malfunctions occur, stop operation immediately and contact qualified personnel.
- Repairs must only be carried out by qualified personnel using original spare parts.
- After a power outage or if the device has been disconnected, wait at least 5 minutes before reconnecting and operating it.
- Dispose of packaging materials safely, as they pose a suffocation hazard for children.
- Use the device exclusively for its intended purpose, such as warming and keeping plates warm. Any other use may cause damage and compromise safety.
- Ensure that the power plug is always accessible to quickly disconnect the device from the power supply in case of emergency.
- Clean the device regularly according to the instructions in the user manual to maintain hygiene and optimal functionality.
- Regularly inspect the power cord for damage and have it replaced by qualified personnel if necessary.

Origin China customs tariff no. 85167970

Stand: 06.03.2025

Importer Saro Gastro-Products GmbH, Sandbahn 6, 46446 Emmerich am Rhein, GERMANY