



## Operating instructions

### Plate warming

Mod.	Article number	Connection	Capacity	Weight (kg)
SYLT 30	458-1055	230V/ 50 Hz/0,4 kW	30 plates	18,10
SYLT 60	458-1060	230V/ 50 Hz /0,75 W	60 plates	25,50
SYLT 120	458-1065	230V/ 50 Hz /1,5kW	120 plates	42,00

## Plate warming cabinet

### **ATTENTION**

- YOUR APPLIANCE IS PROTECTED BY A PLASTIC FILM WRAPPED AROUND THE CASING, WHICH MUST BE REMOVED BEFORE FIRST USE.

Before using your product for the first time, please read these instructions for use carefully. Keep it for future reference.

- Select a suitable installation site for the unit:

a) The unit must not be operated in places where there are flammable materials or materials that could deform when exposed to heat. If this is not possible, line the installation site with heat-resistant, non-flammable material.

b) Choose a place that is as dry as possible.

- Only connect the appliance to sockets with the voltage indicated on the appliance characteristics plate.

- Ensure that the appliance is connected to a circuit rated for the power indicated on the appliance characteristics plate.

- This is a Class I appliance. Only connect the appliance to sockets with an earth connection.

- Do not operate the unit with timers or other accessories that switch it on automatically.

- Never connect the cable to extensions or T-adapters.

- When inserting or removing the plug from the socket, the switches and temperature controls must be in the off position.

- Do not switch off the unit by pulling the plug.

- Never operate the appliance if the cables or plugs are damaged or if the appliance is not working properly.

- Do not operate the unit with the cable rolled up.

- Do not place the appliance near water taps.

- Do not operate the unit too close to electrical connections.

- Do not operate the appliance with wet hands.

- Always operate the unit in a vertical position.

- Only operate the appliance under supervision, especially if children are in the vicinity. Children must not use the appliance as a toy. Cleaning and maintenance must not be carried out by unsupervised children.

- Before cleaning, make sure that the appliance is switched off and has cooled down.

- Do not immerse the unit in water or other liquids.

- Repairs or changes to the connection cable may only be carried out by authorised technicians.

### **SECURITY**

- The appliance must be connected to a power source that is properly fitted, fused and rated for the power of the appliance.
- Avoid contact between the cable and hot parts of the appliance.
- During operation, the unit reaches high temperatures and must therefore be handled with care.

CAUTION: In the event of accidental contact with water, the appliance must be immediately disconnected from the power source and thoroughly dried before reuse.

### **INSTRUCTIONS FOR USE**

- Switch on the unit at the light switch (1).
- Set the desired temperature on the thermostat control (2).
- Place the plates in the compartments in a safe way (7).
- To switch off the unit, set the main switch (1) to the off position (switched off).

This appliance is only suitable for heating and keeping plates (empty) warm. The appliance may only be used for the specified purpose and not for other purposes.

### **CLEANING AND MAINTENANCE**


- The unit must be cleaned regularly.
  - Disconnect the appliance from the mains by pulling the mains plug out of the socket before each cleaning and let it cool down.
  - Clean the control panel area of the unit and the mains cable with a damp cloth and never with abrasive cleaners.
- Only use a damp cloth for cleaning and never running water.
- Dry the unit with a soft cloth.

### **MALFUNCTIONS**

- In case of electrical or other malfunctions, do not attempt self-repair, but take the unit to an authorised service centre.
- If the power cord is damaged, it must be replaced by the manufacturer, its after-sales service, authorised representatives or similarly qualified personnel in order to avoid dangerous situations.

**CUSTOMER SERVICE**

- If you find a fault with the appliance, please contact our official after-sales service, where you will be properly advised. Any repair carried out by persons outside our official after-sales service will void the warranty.

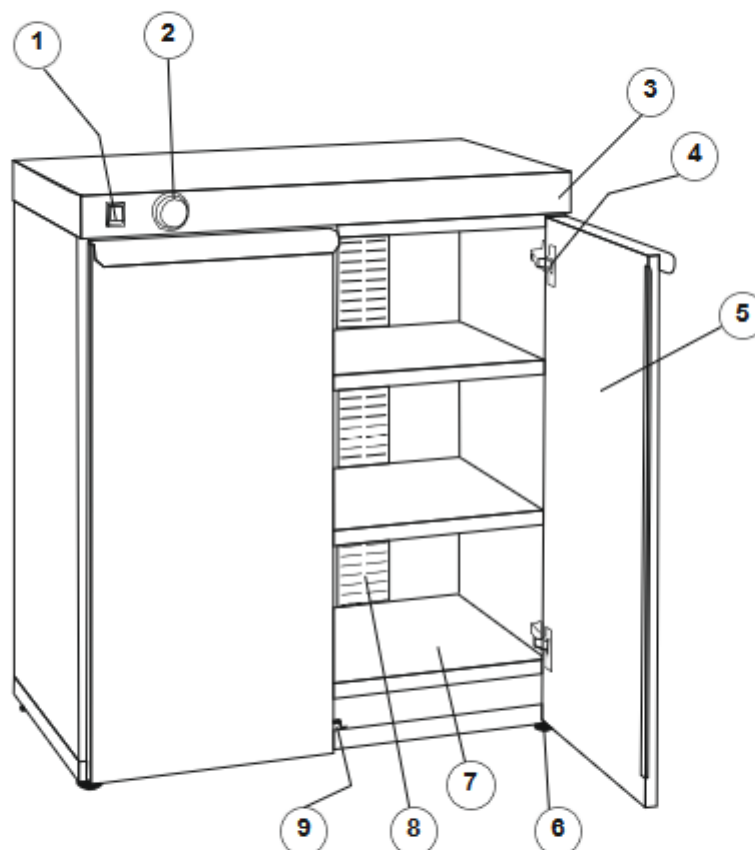

- Legend:
- 1- Main switch.
  - 2- Temperature controller.
  - 3- Frame.
  - 4- Hinge.
  - 5- Flap.
  - 6- Adjustable feet.
  - 7- compartments.
  - 8- Resistance.
  - 9- Magnet.

**Made for:**

SARO Gastro-Products GmbH  
Sandbahn 6, 46446 Emmerich am Rhein, Germany  
Tel. +49 (0) 2822 9258-0  
Fax +49 (0) 2822 18192  
E-Mail [info@saro.de](mailto:info@saro.de)  
Web [www.saro.de](http://www.saro.de)