 


BANQUET TROLLEYS (ELECTRICAL – INDUSTRIAL TYPE)

USER'S MANUAL

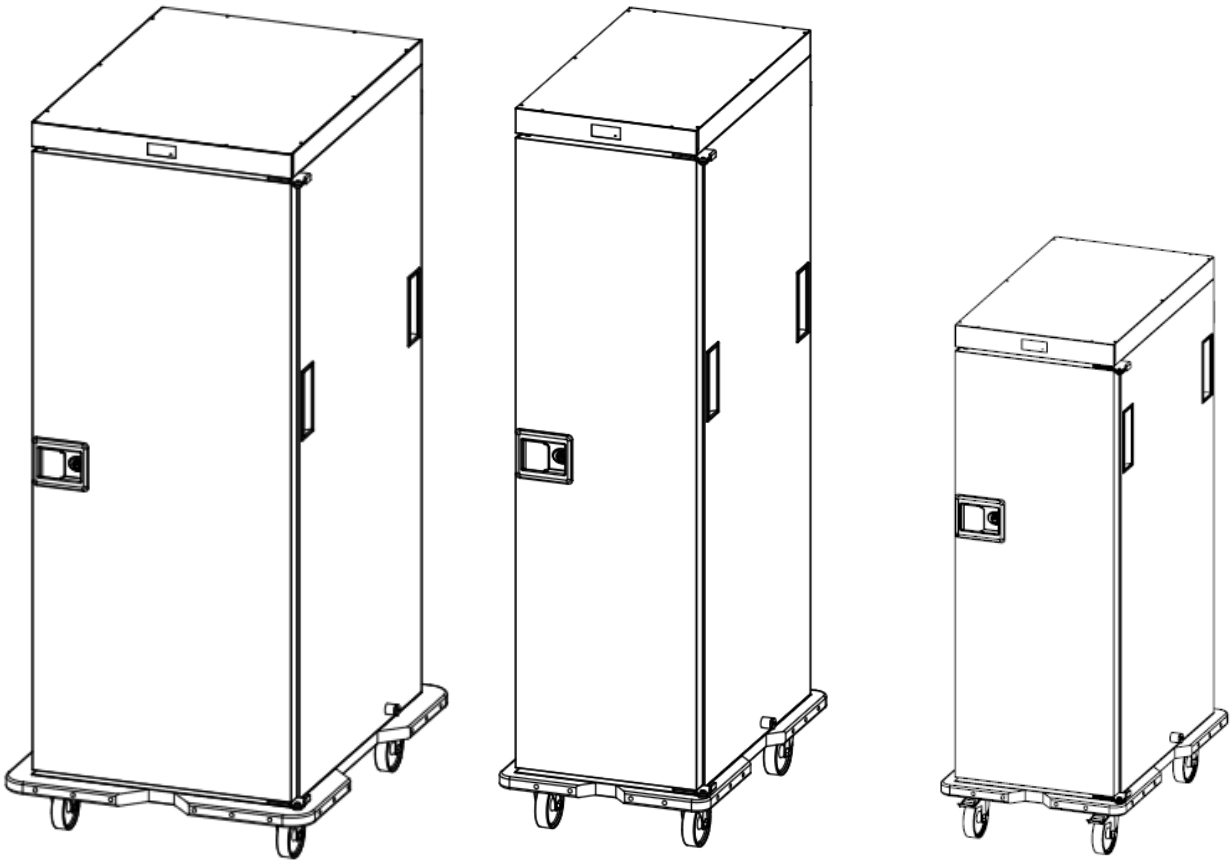

SARO Gastro-Products GmbH
Sandbahn 6
D-46446 Emmerich am Rhein
Germany

T: +49 (0) 2822 9258 0
F: +49 (0) 2822 1819 2
E: info@saro.de
W: www.saro.de

TABLE OF CONTENTS

PAGE NR.	TOPICS
1	COVER PAGE
2	TABLE OF CONTENTS
3	INTRODUCTION
4	TECHNICAL DATA
5	ELECTRICAL CIRCUIT DIAGRAM
6	WARNING SIGNS
7	SAFETY DETAILS
8	TRANSPORTING, MOVING AND INSTALLATION
9	INTRODUCTION OF THE APPLIANCES
10	CONTROL BOARDS, OPERATION OF THE DEVICE (1)
11	OPERATION OF THE DEVICE (2)
12	CLEAN-UP AND MAINTENANCE
13	TERMS OF GUARANTEE



CAUTION

This device should only be used in facilities where relevant standards, laws and safety requirements are complied with

INTRODUCTION

Dear User,


Thank you for purchasing our device and for your reliance upon our company. Our devices have been used within our customers kitchen, your kitchen in 110 countries. Our devices are produced in compliance with international standards. Important notice: Please read or ensure that the users read this user's manual in order to achieve the desired performance in line with your expectations and to use your device for long years. Please take the warnings mentioned above into consideration before calling for service...

-
-  Please read and ensure that your operation personnel also reads this user's manual carefully before installing and using the device. If the device is operated without reading the user's manual, the device will not be covered by the guarantee.
 -  The manual containing information about installation, usage and maintenance of our product you purchased should be read carefully. Please ensure that power supply connections to the device are already installed by qualified personnel according to local legislation, before our authorized service personnel arrives for the installation of the device.
 -  If you are confused or you don't have enough information please get in touch with authorized service by phone.
 -  Please keep in mind that, if the service personnel is delayed at your site, related expenses and delay costs will be charged to you on hourly basis.
 -  We hope that you will get the best performance from our product...

TECHNICAL DATA

YOUR DEVICE'S TYPE	OBA 101 OBA 101H OBAC 101 OBAC 101H	OBA 151 OBA 151H OBAC 151 OBAC 151H	OBA 201 OBA 201H OBAC 201 OBAC 201H	OBA 102 OBA 102H OBAC 102 OBAC 102H	OBA 152 OBA 152H OBAC 152 OBAC 152H	OBA 202 OBA 202H OBAC 202 OBAC 202H
MAIN DIMENSIONS (mm)	570x879x1114	570x879x1469	570x879x1824	775x999x1114	775x999x1469	775x999x1824
TOTAL ELECTRIC POWER (kW)	1,5	1,5	1,5	1,5	1,5	3
ELECTRIC POWER SUPPLY	220 – 240 V AC NPE~ / 50-60 Hz	220 – 240 V AC NPE~ / 50-60 Hz	220 – 240 V AC NPE~ / 50-60 Hz	220 – 240 V AC NPE~ / 50-60 Hz	220 – 240 V AC NPE~ / 50-60 Hz	220 – 240 V AC NPE~ / 50-60 Hz
THERMOSTAT (°C)	30-80	30-80	30-80	30-80	30-80	30-80
CAPACITY	10 x GN 1/1-65	15 x GN 1/1-65	20x GN 1/1-65	10 x GN 2/1-65	15 x GN 2/1-65	20x GN 2/1-65
SUPPLY CABLE	3x1,5	3x1,5	3x1,5	3x1,5	3x1,5	3x1,5
MAXIMUM SLOPE	5°	5°	5°	5°	5°	5°
CLASS/PROTECTION CLASS	1 / IP 21	1 / IP 21	1 / IP 21	1 / IP 21	1 / IP 21	1 / IP 21

 
ELECTRICAL CIRCUIT DIAGRAM(BANQUET TROLLEY)

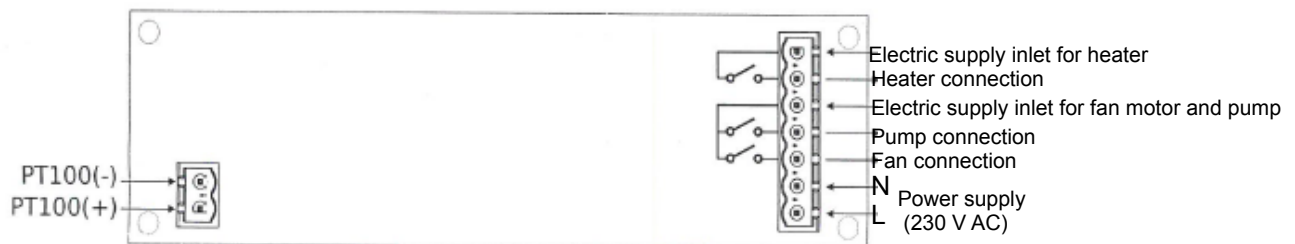

WARNING SIGNS



 POWER NETWORK GROUNDING

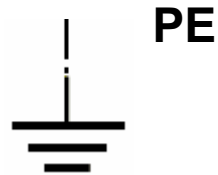

GROUNDING



POWER



OVERHEAT

**SUPPLY CONNECTION: MONOPHASE
VOLTAGE 220-240 V
GROUNDED
FREQUENCY : 50-60 Hz**

SAFETY DETAILS



Any kind of flammable solid and liquid material (cloths, alcohol and derivatives, petrochemical products, wooden and plastic materials, cutting blocks, curtains etc.) should never be held near the device.



Never leave the device under direct sunlight. It should be located **at least 40 cm.** away from heat sources like ovens, radiators and heaters.



Use can use this device simultaneously together with other products of ours.



This device should be installed in line with effective regulations and only be operated in well ventilated places. Please refer to the instructions before installing and operating the device.



This device is designed for industrial use and should only be operated by personnel trained on the device.



The device should not be handled by anyone else except for the manufacturer or authorized service..



In case of fire or flame in the area where the device is operated, act without panic, close gas valves (if any), turn off power switches and use a fire extinguisher. Never use water to extinguish the fire.



TRANSPORTING, MOVING AND INSTALLATION

 Heated units are delivered as a standard in wooden cases, reinforced by EPS block, wrapped with stretch film and air bubble protective packing, and wrapped over again with a second layer of stretch film

 The device may be moved with manpower.
 Do not hit or drop the device when moving.



CHANGING THE LOCATION:



Machines installed by an authorized service CANNOT BE MOVED ELSEWHERE, ITS POWER SUPPLY CABLES CANNOT BE EXTENDED OR REPLACED except by an authorized service.



dec

sho

If this device located near to any wall, separation, kitchen furniture, etc. the distance in between should be 20 cm. and if those are coated with fireproof heat insulating material, the distance

It is strongly recommended that fire safety protection instructions are observed.

 Remove stretch film on the device before installing the device.

 
 After the device is moved to the location where it will be operated, rollers should be set to lock position. In this way sliding of the trolley is prevented.

 Power supply connection of the device should be checked by an eligible electrician, and it should be connected to a fuse at a maximum height of 170 cm.


 Power supply connection should be made using a 30 mA current leakage fuse as a protection against current leakage danger.

 Power installation of the plugs to be used should be grounded by connecting it to a grounding bar at the nearest panel.

INTRODUCTION OF THE APPLIANCES

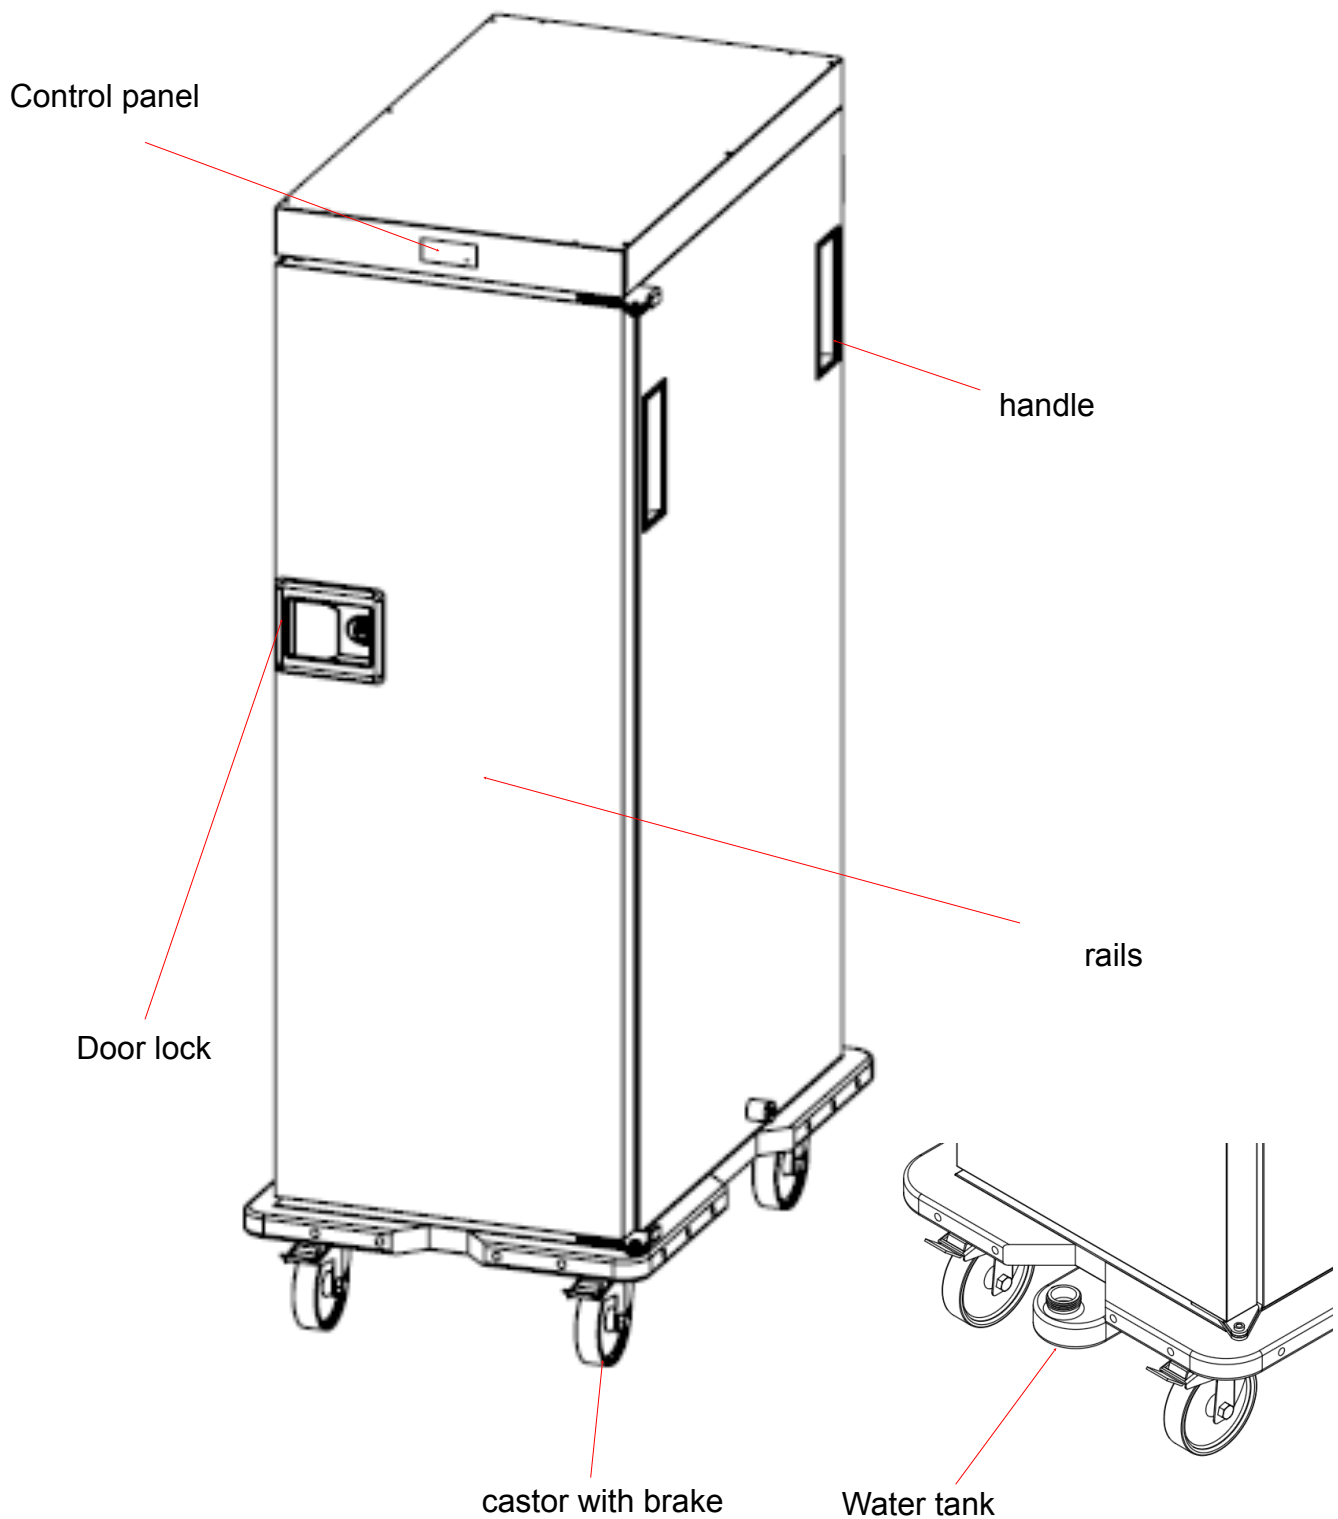

CONTROL BOARDS

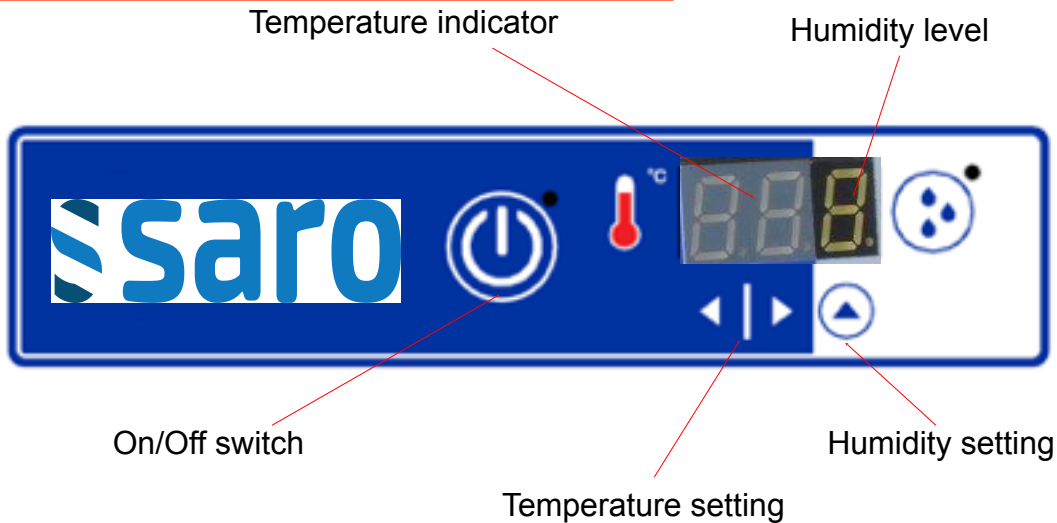 

OPERATION OF THE DEVICE (1)

Banquet trolley is used in kitchens of restaurants, fast food stands, canteens, hospitals in order to keep foods warm and ready for service.

Before initial use of the device, the outer surface should be wiped with a cloth soaked in warm water and soap.

NOTE: Do not use except purpose of use. The device should be operated by qualified personnel knowing safety terms and technical specifications and who has read the instruction manual.



CAUTION !
NEVER OPERATE YOUR DEVICE
WITHOUT GROUND CONNECTION.

USING THE DEVICE:

- 1- Fill the water reservoir located under the unit.
- 2- Press the On / Off button.
3. Press the left and right arrow keys to set the temperature setpoint. The device automatically records the set value.
- 4- Press the right or left arrow key once to see the set value.
- 5- With the up arrow key, the humidity level (0-1-2-3-4-5) is set to the desired value. There is no moisture at zero.
- 6- Manual steam application is performed when the up arrow key is pressed continuously.
- 7- After using the device, it is turned off by On / Off button.

NOTE: The system must be filled with water manually at the first start of the device. For this, the up arrow key is held pressed continuously. If it is not filled with water, the pump will run noisily until the water line runs out.



It is recommended to operate the device between temperatures of +5°C +40°C and in ambient humidity of maximum 65%.

OPERATION OF THE DEVICE (2)



CAUTION! The device should move just on smooth surfaces!

CAUTION! : The device should be installed and operated as described in this user's manual. If any failure is encountered please contact our nearest authorized service dealer.

WHEN THE DEVICE HAS A FAILURE ONLY AUTHORIZED
..... SERVICE DEALERS ARE ALLOWED TO HANDLE
THE DEVICE. IF ANY PERSON OTHER THAN ONLY AUTHORIZED
SERVICE DEALERS HANDLE THE DEVICE, **IT WILL NOT BE
COVERED BY THE GUARANTEE.**

NEVER ALLOW PEOPLE WHO ARE NOT AUTHORIZED TO HANDLE
THE DEVICE. OTHERWISE PRODUCER COMPANY WILL NOT BE
RESPONSIBLE FOR THE CONSEQUENCES. DURING
MAINTENANCE SERVICE OUR AUTHORIZED SERVICE DEALERS
SHOULD NOT BE PROPOSED TO USE NON-ORIGINAL SPARE
PARTS FOR WHATSOEVER. INSTALLING ANY NON-ORIGINAL
SPARE PART TO THE DEVICE LEAVES THE DEVICE **OUT OF
GUARANTEE COVERAGE.**



CLEAN-UP AND MAINTENANCE



After using device, disconnect your device from power supply, by unplugging it or switching it off, before carrying out periodical clean-up.



Clean your device with liquid dishwashing detergent and a piece of cloth or sponge soaked in warm water. Then in order to remove detergent residuals rinse it with a piece of cloth soaked in clear and warm water. Never use abrasive and aggressive cleaning agents like thinners, bleachers, powder detergents.



For cleaning door gasket, **only use warm water and soap**. Do not use detergent or other cleaning agents. Otherwise vacuum feature of the gasket will be harmed.



Be cautious during the clean-up, that water does not get into control boards.

LIFE OF USE

Devices life of use is 10 year if it is used under recommended conditions.



CAUTION! :

Never use combustible, flammable and abrasive materials for cleaning, like gasoline, gas, thinner, acid for cleaning.

TERMS OF GUARANTEE

- 1- Documents without sales date, factory and sales company approval on, are not valid. In order to benefit from the guarantee, guarantee document should be presented.
- 2- If the device is installed and operated following the instructions in the installation, maintenance and user's manual, it is warranted for failures resulting from failures resulting from workmanship and material failures.
- 3- The failures within the scope of guarantee, how and where these will be eliminated, and the way and place of maintenance is determined by
- 4- The guarantee is only valid provided that the guarantee terms and the instructions in the installation, maintenance and user's manual are fully complied with. The guarantee is only valid for the warranted device, and no other right or compensation for some other thing may be claimed.
- 5- If the information about the kind and the type of the device, serial numbers printed on the guarantee document are scraped, rubbed or changed, then the guarantee is not valid.
- 6- The guarantee covers only maintenance and repairing of material or workmanship failure within the valid guarantee period. Failures and parts within the scope of the guarantee are repaired and replaced without any charge. Replaced parts belong to
- 7- The failures occurring in the device may only be handled by service personnel authorized by If people who are not authorized handle the device, it will not be covered by the guarantee.
- 8- Installation should be carried out by authorized service personnel and the service should be informed about the location change of the device.
- 9- When any failure occurs during operation, authorized service dealer should be contacted.
- 10- Guarantee does not cover failures and damages resulting from loading, unloading and shipping, which are outside the responsibility of Similarly, failures and damages resulting from external factors are not covered.