# Ice Maker Instruction Manual

Model: ZBY20UV



Thank you for selecting our ZB Serie Automatic Ice-Maker! To ensure the proper operation of this ice maker, please read the instruction carefully before use and please keep it for inspection in case troubles occur.

### Content

### Important Safety Instructions

Features	1
Notes before Operation	1
UV Sterilization Function Instructions	2
Automatic Cleaning Function	3
Operation Procedures	4
Maintenance	5
Technical Parameters	6
Circuit Diagram	7
Trouble and Shooting	8

### Important Safety Instructions \_\_\_

#### **Important Safety Tips**

When using electrical appliances, basic safety precautions should be followed to reduce the risk or fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instru ction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process or ice harvesting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

Fill with potable water only.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not tip over.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Do not run the power cord carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.

Do not use other liquid to make the ice-cube other than water.

Do not clean your ice maker with flammable fluids. The fumes can create afire hazard or explosion.

We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. Unplug the ice maker before cleaning or making any repairs or servicing.

If the ice maker is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.

The grounding must be good.

The wires in this mains lead are colored in accordance with the following code:

- · Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green and yellow) to terminal marked E



### Important Safety Instructions

### Warning: risk of fire / flammable materials



Refrigerant R600a / R290, this gas is natural gas with high environmental compatibility that is, however, also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of refrigerating circuit are damaged. Refrigerant leaked from the refrigerating pipes could ignite, if leaking is detected, to avoid any potential source of ignition (spark, naked flames etc.), please open window or door, and keep good ventilating.

#### **Correct Disposal of this product**



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Our Automatic ice makers are designed in cubic shape with the curved front panel and curved door (or stainless steel flat front panel and flat door) for nice appearance.

Many advantages of the ice maker are available, such as ice making quickly, great ice making capacity, nice ice shape and ice dropping quickly. Water inlet ~ water filling ~ ice making ~ water releasing and ice dropping, all these processes are automatically controlled for ice making continuously. In case of water shortage or ice full in cabinet, the indicator on the operation board will light on accordingly and the ice maker will stop operation automatically. The ice storag cabinet is PU foamed, so it is insulated well and it could prevent the ice from melting.




### Notes before Operation

1. The incline angle of the cabinet could not be over 450 during transportation. Don't make ice maker upside-down in case the compressor or refrigerating system troubles occur.



- 2. When use for the first time or when restart after long period of unused, the icemade for the first two times is not edible, it is the self-cleaning process of the ice making system.
- 3. The ice maker should be placed on horizontal and structurally sound ground and away from heat source and corrosive gas. At least about 150mm room should be left around the ice maker to ensure the fine ventilation.

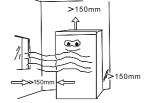

- 4. Please adjust the feet when placing the ice machine, otherwise the water level and the shape of ice will be affected. Before using the ice maker for the first time, you should wait about 12 hours after positioning it in a proper place.
- 5. The outlet of drainage tube should be lower than cabinet so as to drain water easily.
- 6. The separate three-pole outlet should be used and the grounding must be good.



### UV Sterilization Function Instructions \_\_\_\_\_

#### Notes:

- 1.UV sterilization function includes water sterilization and sterilization in the box:
- 2.Each time unit restarts, UV sterilization function is off by default.
- 3. When opening the door, the UV indicator light is off, and the sterilization in the box is The function is forcibly disabled. After closing the door, the UV indicator lights up and the sterilization in the box continues to work.

When the unit is powered on, short press the "(w)" button, then UV indicator light is on, and UV sterilization function unlock; Short press " (w)" button again, then UV indicator light off, UV sterilization function is turned off.

### Automatic Cleaning Function

This Ice Maker is featured with an automatic cleaning function. When the appliance has completed up to 1500 ice-making cycles(roughly after 3-month routine use), the "CLEAN" indicator light will flash with audible alarm, indicating theunit needs to be cleaned. It will keep flashing and alarming until auto-cleaning is started, during which ice can still be made.

- 1. Press and hold the "CLEAN" button for 3 seconds. The water box at the top will turn down and up. When it returns to horizontal position, press the power switch to O(OFF position)and unplug the machine. Make sure no water remains in the water box.
- 2.Unscrew the drainage valve cap at the right lower part at the rear.Let the water drain from the water reservoir thoroughly. Afterwards, re-locate the drainage cap and screw tight.
- 3.Add around 3L dilute cleaner into the reservoir.

**Note:**Choose ice maker specific cleaner and follow the manufacturer's instructions.

- 4. Plug the unit and press the power switch to I(ON position).
- 5. Press and hold the "CLEAN" button for 3 seconds. The "CLEAN" indicator light turns on. The cleaner in the water reservoir will be pumped into the water box to start cleaning. After about 10 minutes, the water box turns to vertical to drop the cleaner. The appliance will repeat above procedures twice. Then, the "CLEAN"indicator light goes out, indicating auto-cleaning is completed.

**Note:**A cycle takes about 30 minutes.

6. Turn the unit off and unplug. Remove the drainage valve cap to empty the water reservoir

Note: After auto-cleaning, use the first 3 ice making cycles to flush out the system. Discard the water and ice created from these initial cycles.

#### **Notes for Descaling:**

In hard water areas lime scale can build up within the appliance after prolonged use.

We suggest installing a water sofaener before inlet of water in case the supplied water is hard. The softener could be a mechanical filter.

To descale, always choose a suitable descaler and follow the manufacturer's instructions.

We recommend that this appliance is descaled every 3 months or more frequently in hard water areas.


### Operation Procedures

- 1.Unpack the ice maker from it's carton, then remove the ice shovel, inlet/outlet tubes, and sealing washers, from the container in the ice maker where they are packed for transit.
- 2.Position the ice maker in a well ventilated place, leaving at least a 150mm gap between the ice maker and the walls/ceiling etc. The ice maker must be level, and situated away from any heat source.
- 3. Attach one end of the  $\phi$ 14mm flexible plastic corrugated pipe to the water outlet on back of machine. The other end of the pipe should be inserted into a waste pipe or a suitable container for the collection of the waste water.
- 4.Connect the 3/4" water inlet hose, supplied with the ice maker, to a drinking water supply and then connect the other end to the water inlet on the back of the machine. When connecting this hose, use the sealing washers supplied with the ice maker to eliminate the risk of a water leak. The water pressure must be a minimum of 1kg/cm² or 14.7psi and a maximum of 8kg/cm² or 117psi.
- 5.Plug the power lead in to the supply socket, then press the green on/off switch on the ice maker to start it, the green "run" light will be lit. The ice maker will start to operate.
- 6. The operation of the ice maker is completely automatic unit the ice is removed from the container. Water supply-ice making-ice transfer-ice storage. Keep ice cubes in storage cabinet. Do not store other foods.
- 7.If the storage container is full with ice, the "ice full" indicator on the display panel will light, and the ice maker will stop automatically. Remove the ice from the storage container, wait for five minutes, then restart the ice maker.
- 8. Should the water supply be restricted or fail, the "water low" light will be lit. The ice maker will stop automatically. When the water supply is restored, wait for at least five minutes then re-start the ice maker.
- 9.Drainage valve instructions: If the ice maker will be unused for long periods of time, please screw off the plastic drainage connector screw on the back of the ice maker so as to drain the surplus water in the water groove. Then screw it on. Wipe the inner liner of the ice storage container with a clean rag. ( Drain valve in the instructions for the label 12. )



#### Maintenance

- 1. If the compressor stops for any reasons like water shortage, too much ice, power off, etc. Don't restart it right away. You can restart it after 5 minutes in order to protect the compressor.
- 2. Check the connectors of the water inlet and outlet, tubes and drain regularly for surplus water that may be present.
- 3. If the ice maker will be unused for long periods, please screw off the plastic drainage connector screw on the back of the unit in order to drain the surplus water in the water groove, then screw it back on. Wipe the inner liner of the ice storage container with a clean cloth.
- 4. When plugging in or unplugging, the plug should be held by hand and the wires should not bedragged heavily.

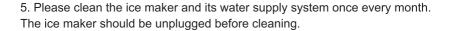




### **Technical Parameters**

( tested under the following conditions: ambient temperature of 15°C and tap water temperature of 10°C )

Model	Ice Making Capacity (kg/24h)	Ambient temperature (°C)	Electric Shock Protection Class	Power Input (W)	Dimensions L×D×H (mm)
ZBY20UV	≥ 20kg	10°C ~ 43°C	I	185	380x477x590

The specifications are subject to change without prior notice. Please check the nameplate to be sure.

# Circuit Diagram

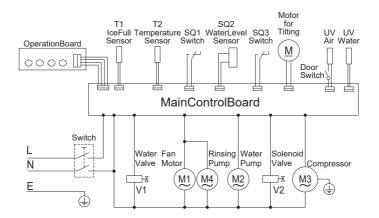



## Trouble and Shooting \_\_\_\_\_

(for reference of users and technicians)

TROUBLE	CAUSE	REMEDY	
The ice maker doesn't work.	<ol> <li>The voltage is out of the limitation.</li> <li>The ambient temperature is lower than 100 C.</li> </ol>	Stop the ice maker and restart it until the voltage is normal.     Try again when the ambient temperature higher than 100 C.	
Water shortage indicator lights on.	Water shortage from the water supply system.     Water value damaged.     Tap water pressure too low.	<ol> <li>Check the water supply. If it is OK, restart the maker.</li> <li>Check the water valve.</li> <li>Be sure the tap water pressure is higher than 1kg/cm².</li> </ol>	
Compressor doesn't work.	Water shortage.     Ice full.	Check the water supply system (water valve and water supply tube).     Take out some ice.	
Compressor works, but no ice is made.	Refrigerant leakage.     The refrigerating system is blocked.	Recharge the refrigerant and check the leakage again.     Charging N2 to check whether the system is blocked and replace the dryer-filter.     Replace the solenoid valve.     Check whether the fan is running.	
1. Water temperature or ambient temperature is too low. 2. The solenoid valve is damaged.		Check whether the ambient temperature is too low.(Lower than 100C) or water temperature is too low (lower than70℃).     Replace the solenoid valve.	
Trouble indicator lights on.	The water box doesn't tilt.	Unplug the power.     Check the tilting motor and the relative system. 3-5minutes later restart the machine.	
Repeatedly press the button, UV indicator light is off.	Indicator light or push button is damaged;     Z.The door isn't closed.		
The UV indicator light blinks once every one second.  1. Water sterilization failure; 2. The sterilization in the box failure.		Close the door, power off for 5 minutes and restart the unit, if	
The UV indicator light blinks once every three seconds.	Water sterilization failure.	the problem still exists, please contact the after-sales.	
The UV indicator light blinks twice every three seconds.	The sterilization in the box failure.		