

# Knee Operated Hand Wash Basin 7531.0005

User Manual Gebruikershandleiding Gebrauchsanweisung Le mode d'emploi



# CONTENT

ENGLISH	
1. General information	3
2. Content of the package	3
3. Installation of the hand wash basin	4
4. Cleaning and maintenance	4




## INSTALLATION AND MAINTENANCE HANDBOOK

#### **1.** General information

- Read these instructions carefully as they contain important information for the installation of the hand wash sink.
- After unpacking the sink, check whether everything is in a faultless condition. In case of damaged parts, please contact your dealer.
- Dispose the packing material according to the local regulations. All the package material (plastic bags, cardboards, polystyrene foam, etc.) <u>should not be left within the reach</u> <u>of children, because it is a potential source of danger.</u>


# 2. Content of the package

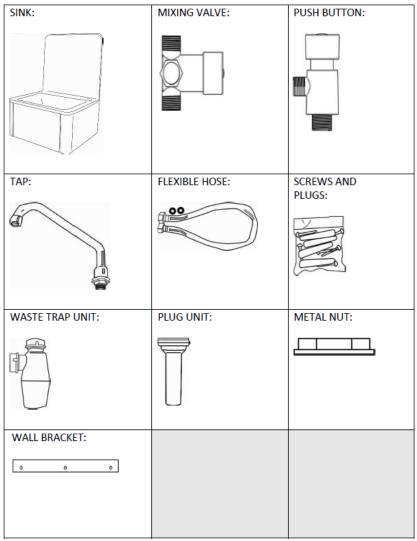




#### 3. Installation of the hand wash basin

- Install the waste trap unit at the sink discharge.
- Put the tap into the hole which is located above the right sink edge.
- Screw the flexible hose (under the sink edge) to the tap.
- Fix the sink with the attached support and the screws in horizontal position on the wall.
- Screw the valve to the tap hose and consider the direction of the water flow. There is the arrow on the valve (see fig. "'Push button").
- Put the valve into the hole on the crossbar and lock with the nut.
- If you need the mixing valve for cold / warm water, then mount this valve on the push button.
- The connection to the water supply pipe and also the discharge should be installed by a plumber. These accessories are excluded from the delivery.

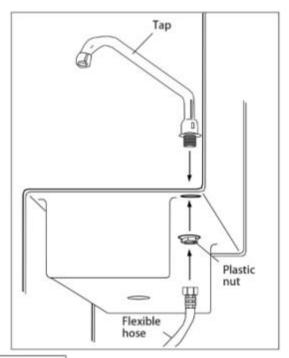

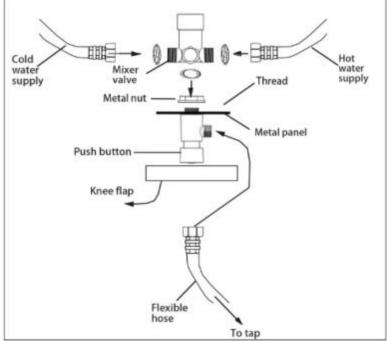

### 4. Cleaning and maintenance

- Hand wash sink should be cleaned daily using water and soap. To clean, use a damp, soft cloth and then dry thoroughly. Do not use abrasive cleaners, such as scouring powder, containing alcohol, thinners, etc.
- Regularly clean the waste trap unit.

